

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-955

DUAL PORT USB CHARGER

FITMENT: HONDA GOLDWING/GOLDWING TOUR 2018-NEWER

8/6/2019

TOOLS NEEDED: 5MM ALLEN WRENCH

SMALL PHILLIPS SCREWDRIVER

8MM SOCKET WRENCH

MARKER/PEN

DRILL

MASKING TAPE

1-1/8" (28MM) DRILL BIT

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.  
ESTIMATED INSTALLATION TIME: 45 TO 60 MIN.

## NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

### INSTALLATION:

1. USING A 5MM ALLEN WRENCH REMOVE THE SCREW ON THE BOTTOM OF THE LEFT SIDE MIRROR. SEE FIG. 1.
2. PULL DOWN ON THE MIRROR BASE COVER AND REMOVE IT.
3. USING AN 8MM SOCKET WRENCH REMOVE THE TWO BOLTS HOLDING THE LEFT MIRROR. SEE FIG. 2.
4. PULL THE MIRROR OUT AND UNPLUG THE CONNECTOR SHOWN IN FIG. 3.
5. USING A 5MM ALLEN WRENCH REMOVE THE SCREW ON THE TOP OF THE LEFT SIDE PANEL SHOWN IN FIG. 3.
6. REMOVE THE TWO ALLEN SCREWS FROM THE BLACK PANEL SHOWN IN FIG. 4.
7. REMOVE THE BLACK PANEL. START ON THE BOTTOM AND WORK YOUR WAY UP PULLING OUT.
8. USING A SMALL PHILLIPS SCREWDRIVER PUSH IN THE CENTER OF THE PUSH PIN SHOWN IN FIG. 5. REMOVE THE PIN. **NOTE: PUSH THE CENTER OF THE PUSH PIN BACK SO THAT THE CENTER PROTRUDES OUT THE FRONT SIDE TO MAKE IT READY TO REINSTALL.**
9. ON THE FRONT OF THE LEFT SIDE PANEL REMOVE THE ALLEN SCREW SHOWN IN FIG. 6.
10. INSIDE THE LEFT FAIRING JUST ABOVE THE FRONT FENDER REMOVE THE ALLEN SCREW AND THREE PUSH PINS SHOWN IN FIG. 7.
11. PULL THE LEFT INNER PANEL OUT AND REMOVE THE PUSH PIN SHOWN IN FIG. 8.
12. STARTING AT THE REAR OF THE LEFT SIDE PANEL PULL OUT AND REMOVE THE LEFT SIDE PANEL.
13. PLACE MASKING TAPE ON THE PANEL AS SHOWN IN FIG. 9. MARK THE LOCATION AS SHOWN IN FIG. 9. **NOTE: THE USB CHARGER CAN BE PLACED IN OTHER LOCATIONS IF NEEDED.**
14. USING A 1-1/8" DRILL BIT DRILL A HOLE THROUGH THE PANEL AT THE LOCATION YOU MARKED. REMOVE ANY BURRS. **NOTE: BIG BIKE PARTS RECOMMENDS USING A STEP DRILL WHEN DRILLING THIN PLASTIC PANELS.**
15. INSTALL THE USB BASE INTO THE PANEL AND INSTALL AND TIGHTEN THE LARGE NUT ON THE INSIDE OF THE PANEL. SEE FIG. 10.
16. CONNECT THE SUPPLIED HARNESS TO THE USB BASE. RED WIRE TO RED WIRE AND BLACK WIRE TO BLACK WIRE.
17. USING FIG. 11, FIND AND REMOVE THE PLUG FROM THE ACCESSORY CONNECTOR.
18. FEED THE WIRE HARNESS FROM THE USB CHARGER THROUGH THE FAIRING AND UP TO THE ACCESSORY CONNECTOR.
19. PLUG IN THE USB CONNECTOR AS SHOWN IN FIG. 12. USE SUPPLIED WIRE TIES TO SURE THE WIRES.
20. TURN THE BIKE ON AND TEST THE USB CHARGER.
21. REINSTALL THE SIDE PANELS AND MIRROR IN REVERSE ORDER.



STEP DRILL

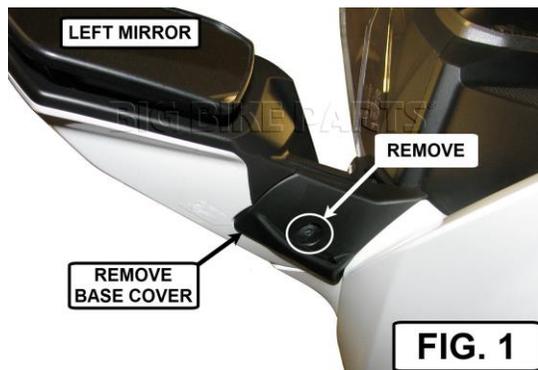


FIG. 1



FIG. 2

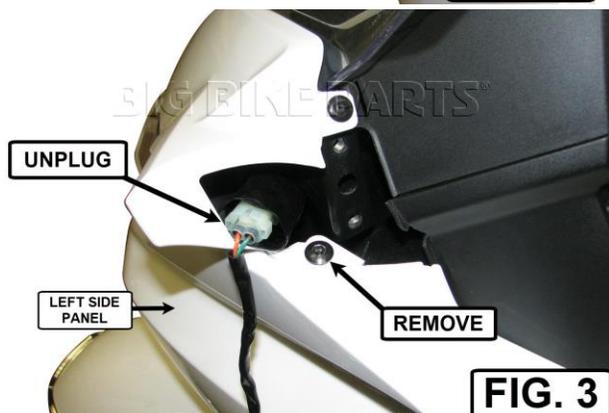


FIG. 3

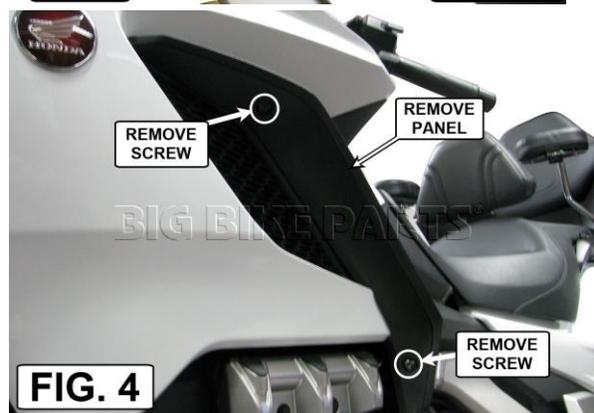


FIG. 4

